

G2501-C Port and LED Definition

Troubleshooting

The G2501-C has three (3) Status LEDs:

- **PWR:** it will be ON when connected to a local power source. If it is OFF, please verify you have connected the 5V wall adapter to a working power jack.
- **STA:** it will be yellow while the G2501-C is booting and then will be OFF.
- **G.hn:** it will be ON (green) to indicate that the link to the Internet is UP. It will be OFF in the link is DOWN. It will blink ON and OFF to indicate a bad link. You can restart the G2501-C if you see a blinking G.hn LED. If this does not solve the problem, please reach out to your Operator for assistance.

WWW.POSITRONACCESS.COM

© Positron Access Solutions

5101 Buchan Street, Suite 220,
Montreal, QC H4P 2R9 Canada
info@positronaccess.com

G2501-C

Self-installation Guide



Unpacking the G2501-C



G2501-C




5V wall adapter

Connecting the G2501-C to your Residential Gateway


Step 1. Find a location close to where you will install your Residential Gateway. This location should also be close to the coaxial jack where you will connect the G2501-C and to a power outlet.

Step 2. Connect the port labeled as LINE to your coaxial jack.

Step 3. Connect the 5V wall adapter to a nearby power plug and connect it to the G2501-C 5V connector.

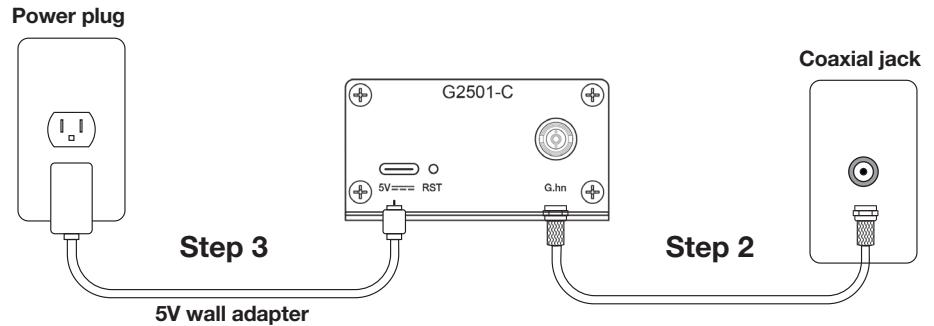

Step 4. Connect the port labeled as GE (on the opposite end of the G2501-C) to your Residential Gateway using a standard Ethernet cable (usually provided with your Residential Gateway).

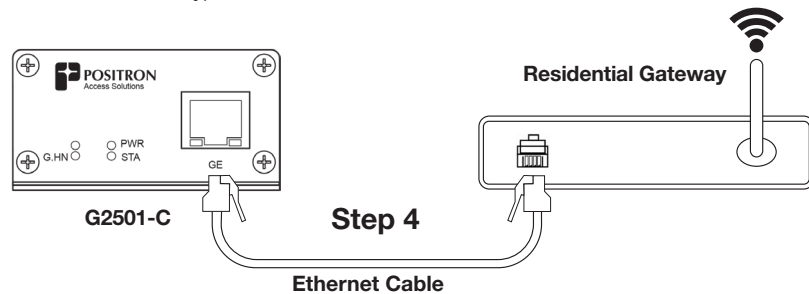

Power Up

The G2501-C takes less than one (1) minute to power up and establish the connection to the Internet. The STA LED will turn solid green to indicate that the G2501-C boot sequence is completed. The G.hn LED will turn green solid to indicate that the link is UP.

Your Residential Gateway will now be able to obtain its configuration and IP address and begin providing access to the Internet for your in-home devices. Refer to the installation document for your Residential Gateway if needed.